




## REPLACING MOUNTING STRAPS

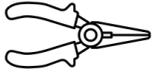

NEEDLE NOSE PLIERS

The main straps pass behind a wooden dowel at the top edge of the bag. The dowel fits quite tightly into its sleeve, but sliding straps through is easy peasy when following these steps:



1.) Slide the HDPE liner halfway out, away from the dowel and its sleeve. This will loosen the sleeve's grip on the dowel, helping the strap pass through more freely.




2.) If passing the strap behind the dowel is still difficult, wedge needle nose pliers or a small tire lever below the dowel for extra clearance.



3.) Pull the straps through from top to bottom with the buckle up and its prong angled toward the bag.

## RELOCATING THE LOWER DOWEL

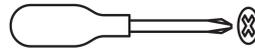


#2 PHILLIPS



#6 X 1/2"

At the bottom edge of the bag, a second wooden dowel adds stability when the bag is not supported by a rack. Up front, this dowel prevents the bag folding over the head tube. In back, it holds the bag off the seat post and away from the thighs. If running a rack, you may choose to remove the lower dowel.

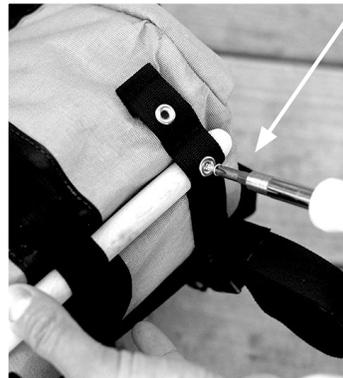

1.) To adjust the lower dowel placement, first remove the #6 x 1/2" screw with a #2 Phillips screwdriver, then slide the dowel out.



2.) To move support toward the bottom of the bag, move the lower dowel to the loops farther from the upper dowel. Ensure that the screw hole in the dowel is visible through the webbing grommet.



3.) Tighten the screw until just snug in the pre-drilled hole. If you must redrill the dowel, use a 1/8" bit and plunge ONLY 3/8" deep.

▲ Secure the bolts but be sure **not to overtighten**.

▲ When replacing the upper dowel, use only a wooden dowel provided by BXB. The lower dowel may be used in place of the upper dowel while you contact us for a replacement. Using a dowel or rod not provided by BXB may void your warranty.



# INSTALLATION GUIDE PICCOLO™ SMALL AND LARGE

## NO RACK™ HANDLEBAR MOUNTING



VOILE® STRAPS  
9"-15"



CAM STRAP



FOAM SPACER X8



1.) Slide 2-3 foam spacers onto each strap to open the space between bag and bar for hands and cable routing.



2.) Center the bag and the straps with the stem with the buckles above the bar. Check for interference with cable housing. Then tighten the straps incrementally, until the bag is well secured.



3.) At the bottom of the bag, where it rests against the head tube, pass the cam strap behind the lower dowel.



4.) Add additional foam spacers to the cam strap to protect your frame, then lash the cam strap around the head tube

## NO RACK™ SADDLE MOUNTING



VOILE® STRAPS  
6"-9"



CAM STRAP



FOAM SPACER X8



1.) When installing straps, feed them through until the buckle contacts the upper dowel.



2.) While holding the upper dowel against the saddle loops, feed straps under and up through the saddle loops. Buckle the straps to hold the bag in place.



3.) Push the bag firmly against the saddle and tighten the straps fully. The bag should rest snugly against the saddle. Tuck the strap tails out of the way under the saddle, or trim if desired.



4.) Slide 2-4 foam spacers onto the cam strap, then lash it around the seat post. Adjust number of spacers to hold the bag off the post, well away from thighs.